




DECORATIVE WALL PANELS GUIDE

The essential guide to installing wooden wall panelling

Wood wall panel installation guide


 You will need :

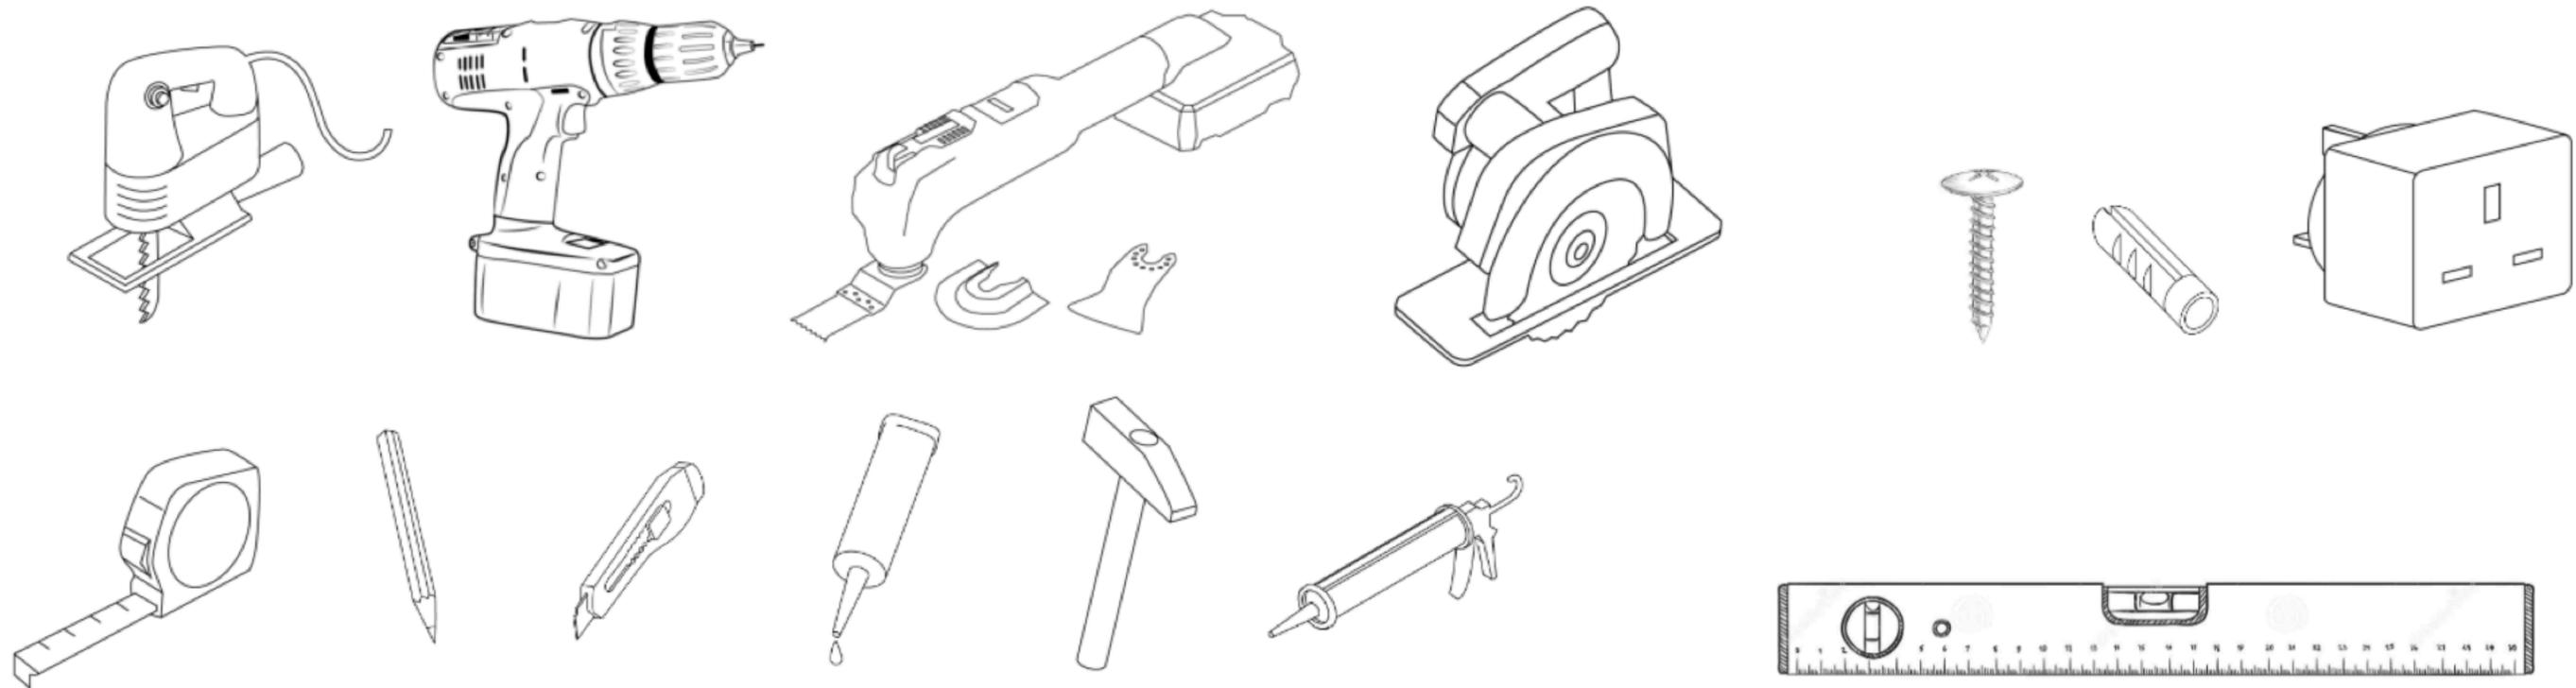

Comments: drill, 8 screws (black recommended, 1 ½ inch in length), level, pencil, tape measure.

Optional: circular saw, mounting wall glue, LED tape, scissors.

Steps :

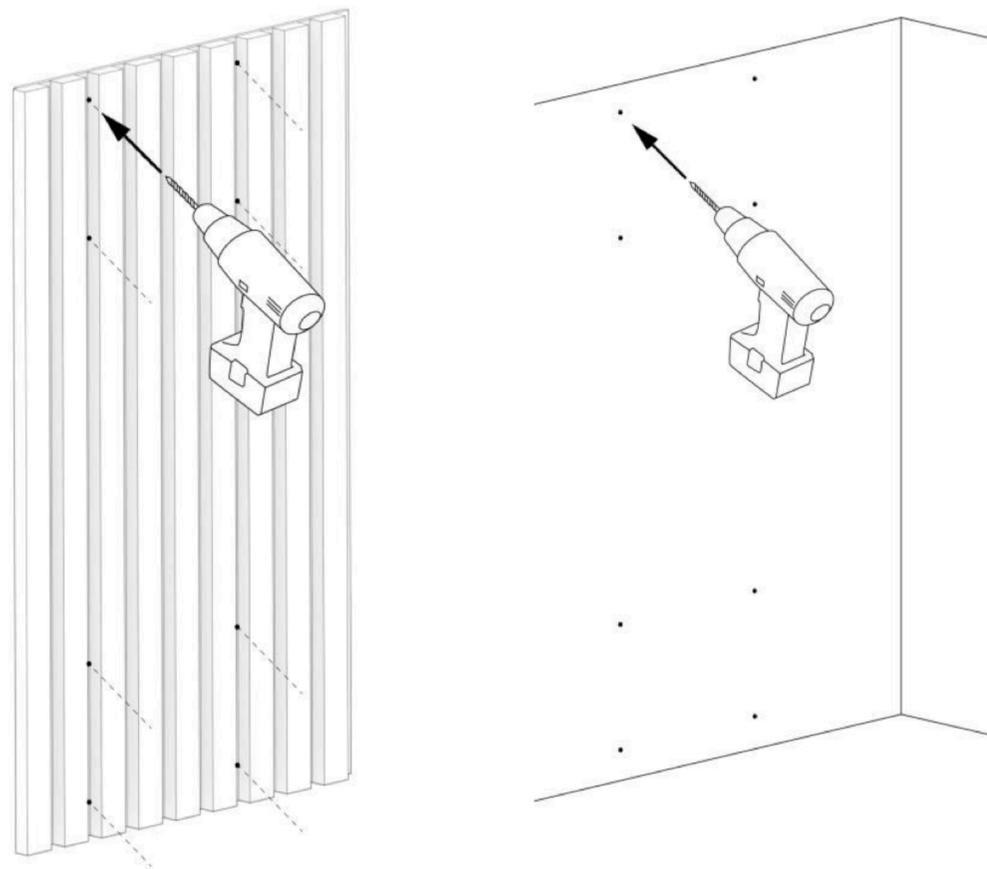

STEP 1 : Use appropriate drill to mark the points on the wall

STEP 2 : Take off the wall panel and drill appropriate holes

1. Screw & glue mounting / Glue mounting :

Measure your space and decide where you're going to install the panels. Some people center the panels on their wall for a framed look, while others install them flush with the floor for a more grounded aesthetic.

NOTE 1: If you're mounting into drywall only, be sure to insert the appropriate anchors before drilling.

NOTE 2: If the dimensions of the wall panels need to be correlated– go into point 4 (Cutting wall panels to desired dimensions).


NOTE 3: For each installation use spirit level.

We recommend a total of 8 screws per panel, spaced evenly around the edges and closer to the middle of each panel, as shown. Additionally you may also use the professional glue for walls.


COMMENT: You may use professional glue dedicated for walls and resign from using screws.




Steps :

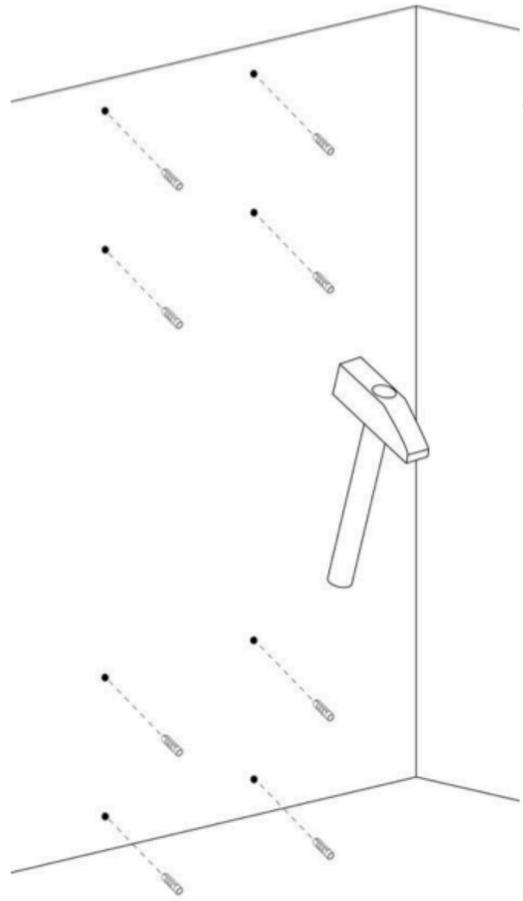

STEP 3 : Put Anchors

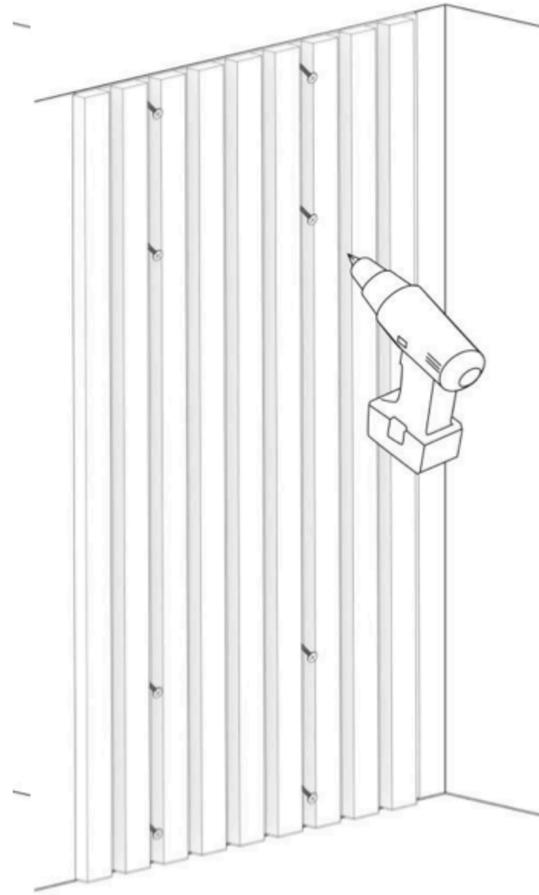



STEP 3 : Place decorative acoustic panel to the wall and mount using drill and screws.

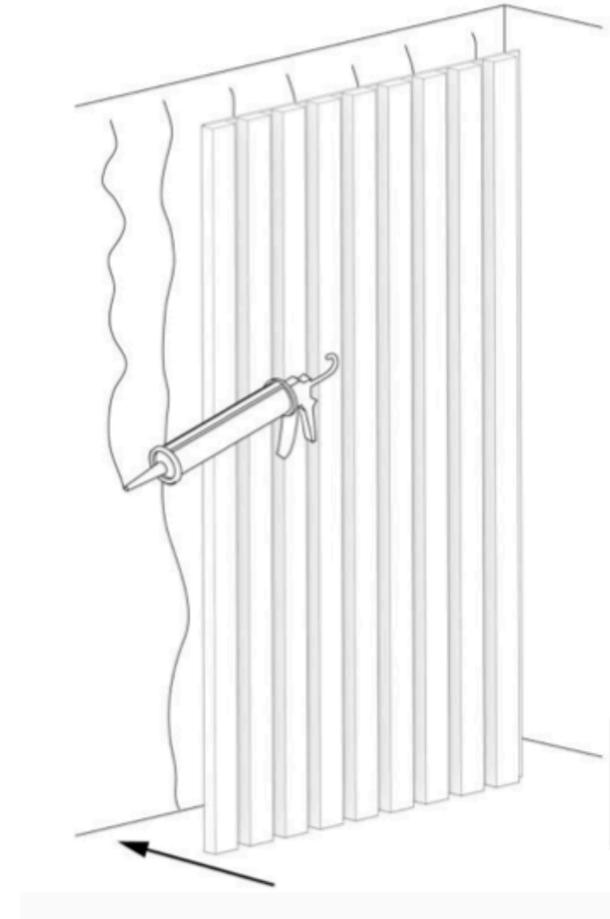

STEP 4: You may use only glue for mounting the panels.



Steps :

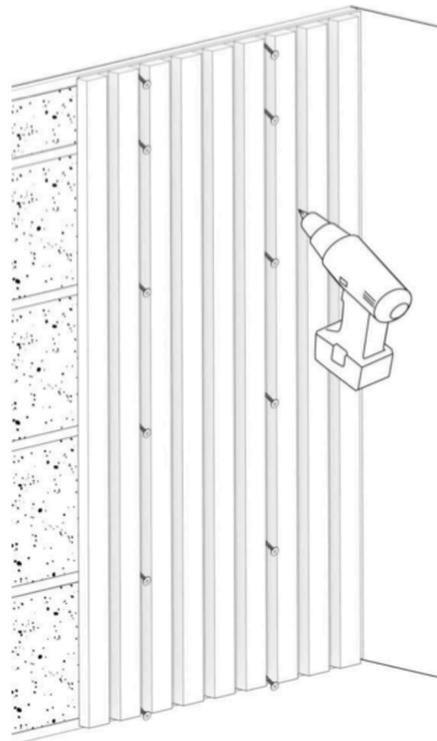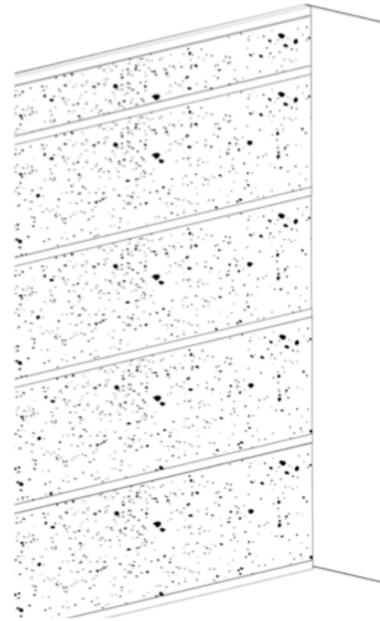

2

2. Screw mounting on the wooden profiles


We recommend to place a wooden profile on the wall with distance 60 cm. Then the decorative acoustic panels are placed directly on the wooden profiles

Measure your space and decide where you're going to install the panels. Some people center the panels on their wall for a framed look, while others install them flush with the floor for a more grounded aesthetic

NOTE 1: If the dimensions of the wall panels need to be correlated– go into point 4 (Cutting wall panels to desired dimensions).

NOTE 2: For each installation use spirit level.

 Steps :

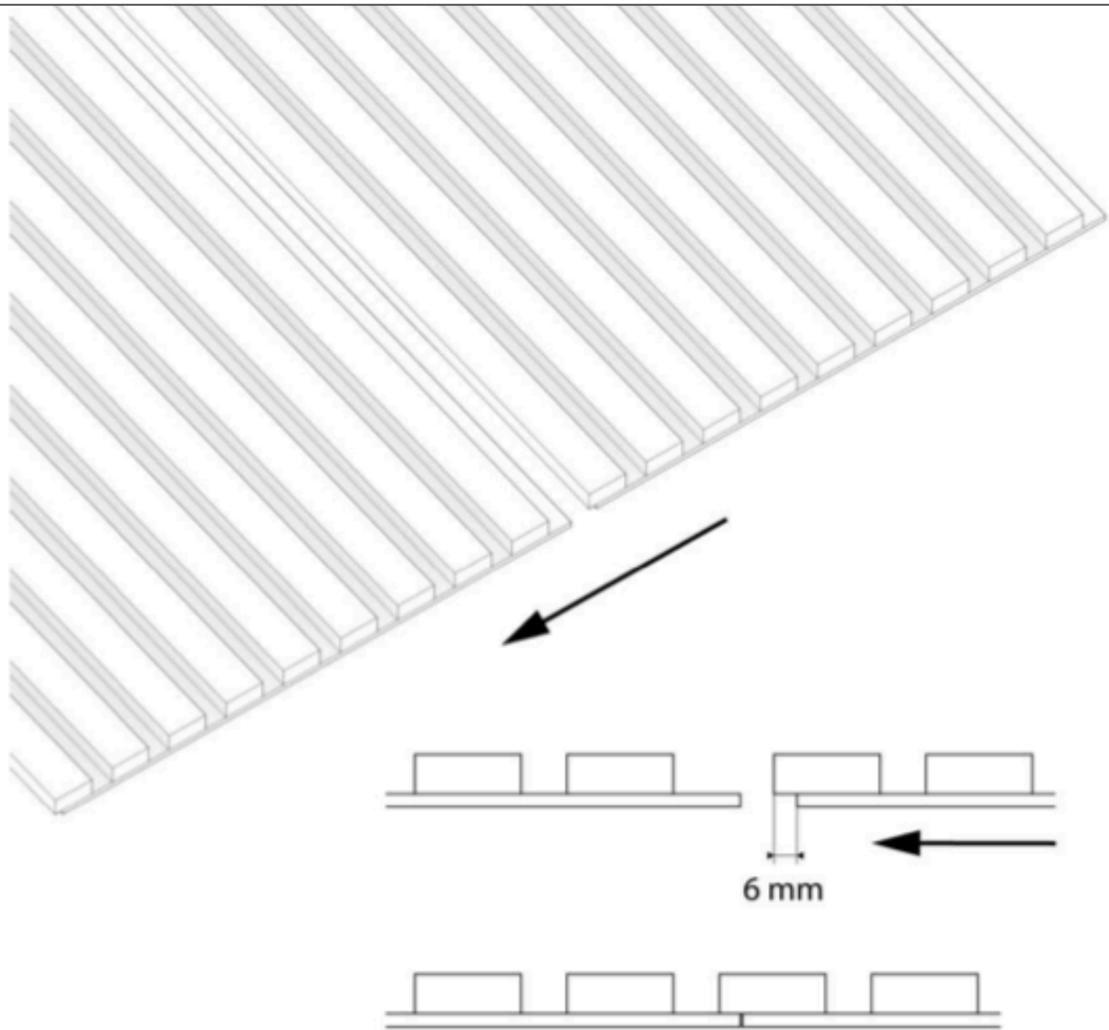


3. Connection of wall panels

You may connect few panels easily together according to the presented drawing.



Steps :

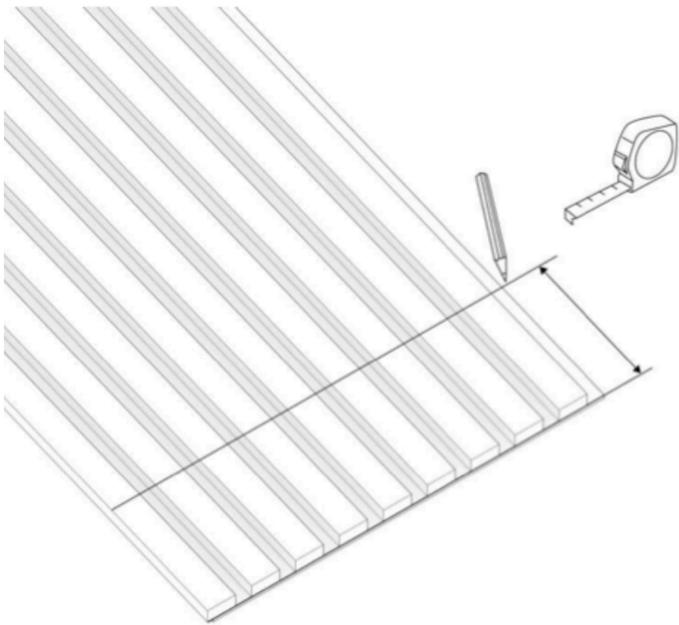

4. Cutting Panels to desired dimensions


LENGTH/ Measure desired length of a wall panel, and mark it along the slats using a pencil.

Flip the wall panel over, slats facing down, and use a circular saw to cut the panel at the length you previously marked



WIDTH/ Measure desired width of the wall panel and mark it using a pencil.

For cutting the panel use carpet knife.

Once your wall panel is ready for mounting, come back to point 1 (Screw&Glue mounting/ Glue mounting).

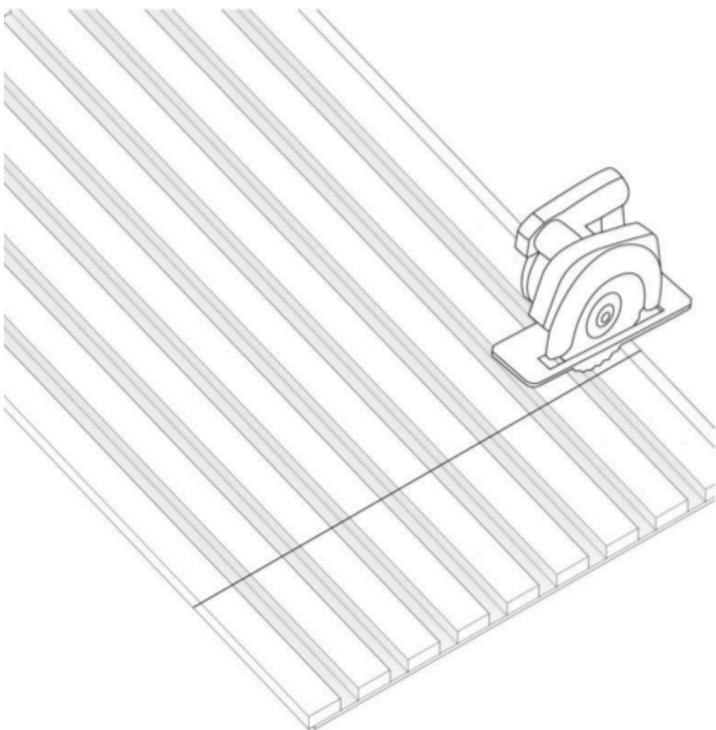

Steps :

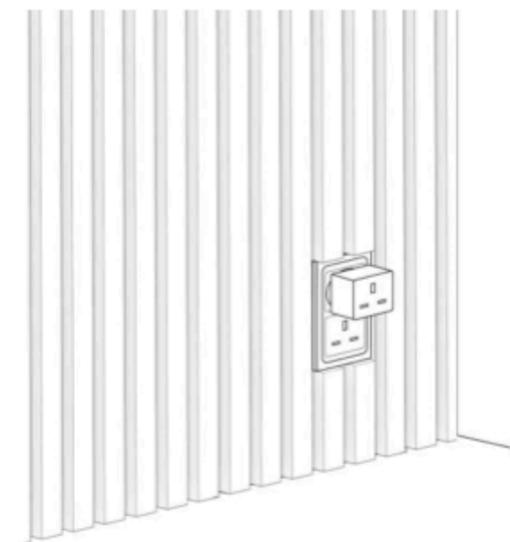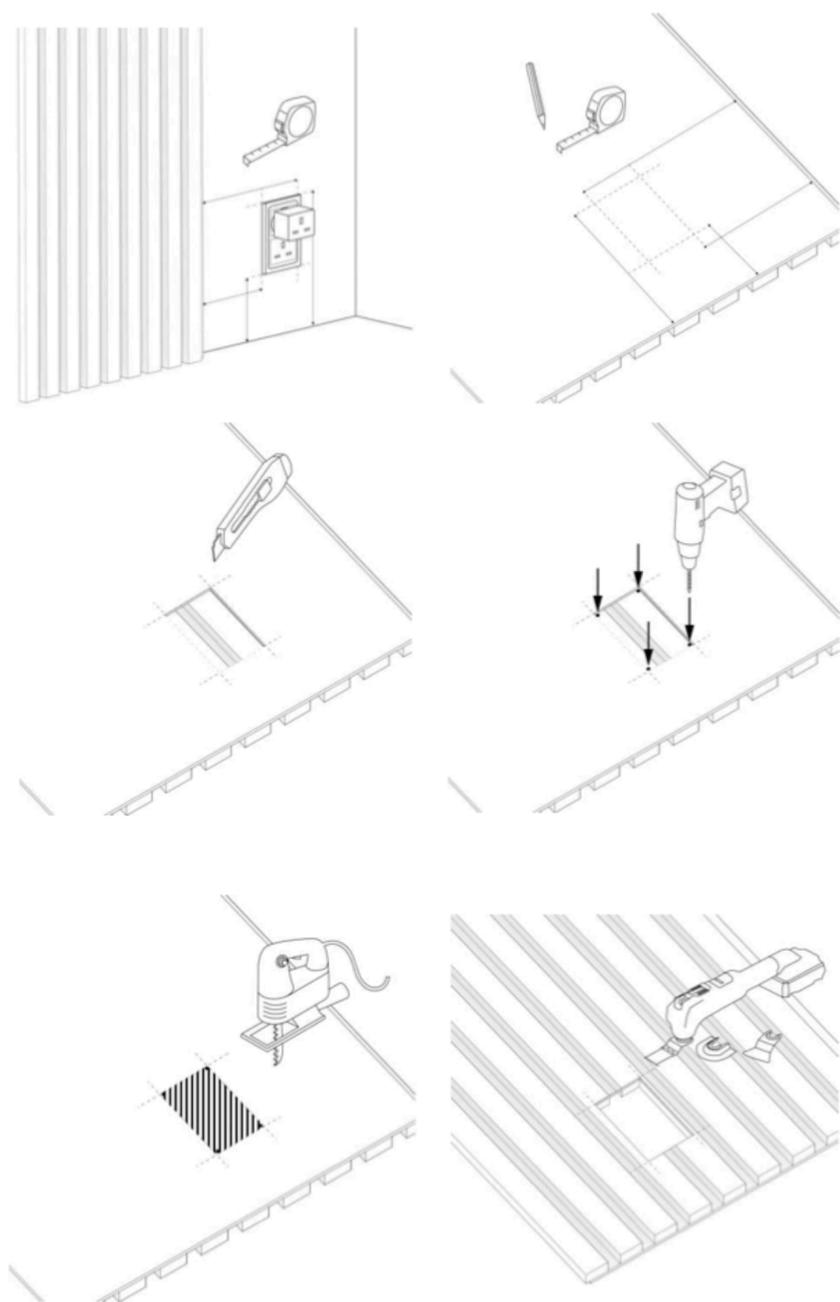

5. Mounting on the socket


Measure the place on the wall, where the socket will be placed.

Apply this measurement to the panel and cut out with the multi tool saw.

Add glue to the Pamela's under and above the socket and then install the panel on the wall



Steps :

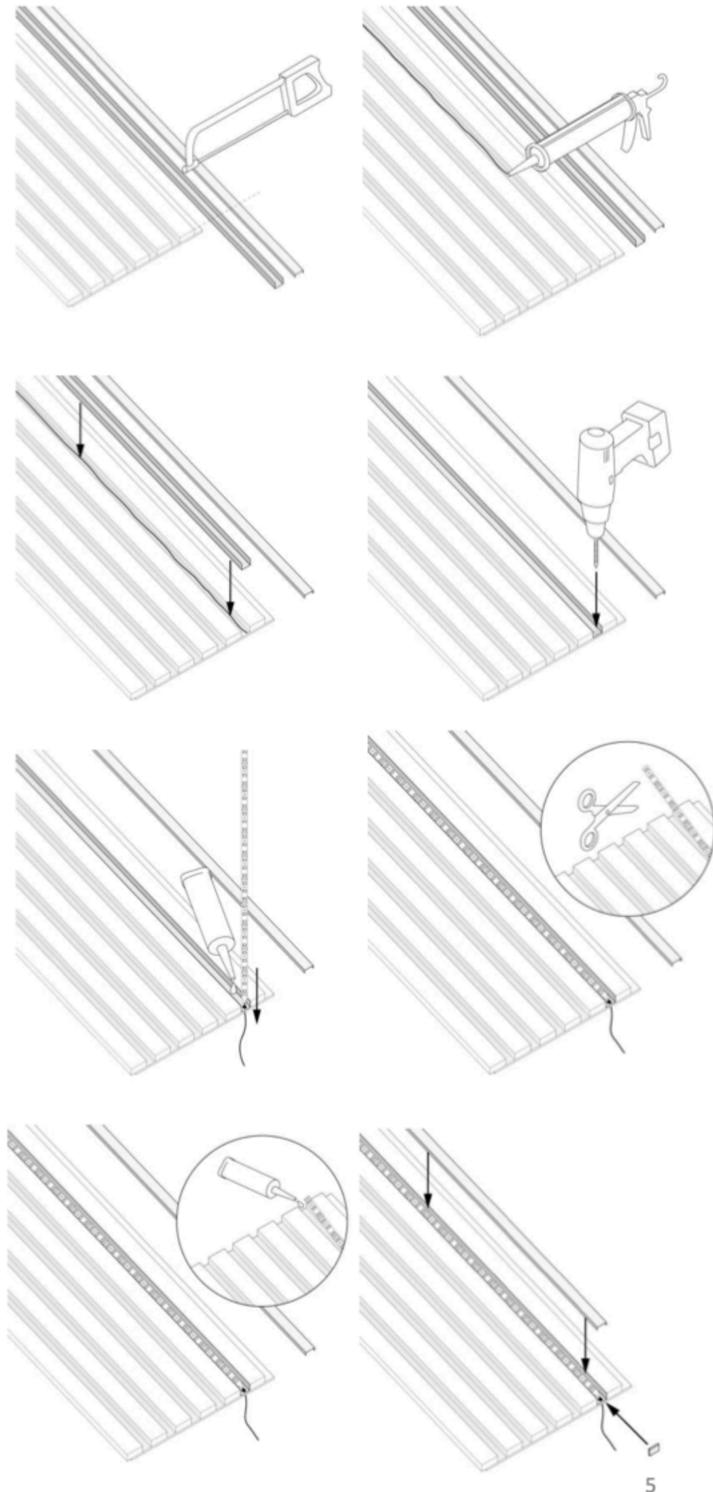

6. Installation of the LED tape

Prepare the aluminium profile and cut to desired length with a normal hacksaw.

Use the mounting glue and put between the lamellas in place where you want to use LED.

Drill a hole as close to the end as possible and thread the cable back through the hole.

Stick the LED tape. It is recommended to use additional glue at the beginning of the profile.

Cut the tape at the desired length of the wall panel and stick to the profile.

Comments : Installation of the LED Strip should be carried out by a electrician.